

WALKMAN

Radio Cassette Player**WM-FX301/303****Operating Instructions**

WALKMAN is a trademark of Sony Corporation.

Sony Corporation © 1994

Printed in Malaysia

OWNER'S RECORD

The model number is located at the rear and the serial number is located inside the cassette holder. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____


Serial No. _____

Featuring

AVLS (Automatic Volume Limiter System)

The AVLS selector allows you to limit the maximum volume of your Walkman personal stereo without degrading the sound quality.

- When the AVLS selector is set to either position 1 or 2, (around 95dB and 85dB, respectively) the volume will be kept at a moderate level without the degradation of the sound quality, even if you attempt to turn the volume up higher.
- When the AVLS selector is set to either position 1 or 2, the playback sound may be distorted or unstable according to the music (especially the bass boosted part). If this happens, turn down the volume.
- When the AVLS selector is turned off, you will be able to enjoy the full volume capability of your Walkman personal stereo.

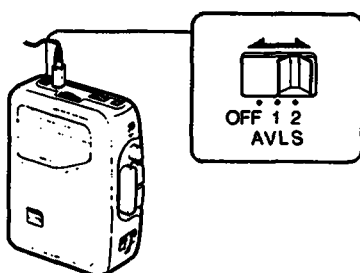


down the volume.

- When the AVLS selector is turned off, you will be able to enjoy the full volume capability of your Walkman personal stereo.

Getting Started

Using with Batteries

Insert two AA (R6) batteries in correct polarity.

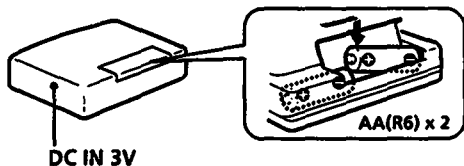

Notes

- When you are not going to use your Walkman for a long time, remove the batteries to prevent damage from battery leakage and corrosion.
- When the sound becomes unstable or cannot be heard, replace the old batteries with new ones.

Using External Power Sources

You can connect the following external power sources through the DC IN 3 V jack located on the bottom. (When you plug a cord into the DC IN 3 V jack, the internal batteries are automatically bypassed.)

- House current using an AC-E30L AC power adaptor
- 12 V car battery using a DCC-E130L car battery cord


Note

Use only the recommended AC-E30L AC power adaptor (not supplied). Do not use any other AC power adaptor.



Polarity of the plug

Playing Cassettes

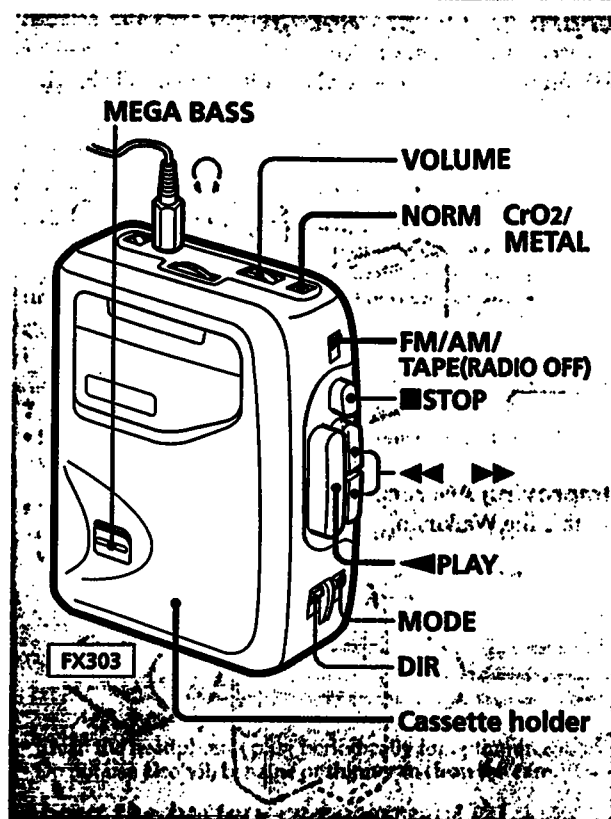

Operating the Cassette Player

To wind the tape	Press ◀◀ or ▶▶.
To change sides	Set the DIR switch.
To play both sides once	Set MODE to ↲.
To play both sides repeatedly	Set MODE to ↻.
To adjust the volume	Set the VOLUME control.
To stop	Press ■ STOP.


Note on the DIR switch

When the MODE switch is set to ↻, the DIR switch turns automatically at the end of a cassette. If the switch does not turn automatically, check to make sure the MODE is properly set (see above). If the DIR switch still does not turn, the batteries are weak. Replace them with a new set of batteries.

Notes on playing cassettes

- Do not use cassettes longer than 90 minutes except for long continuous playback.
- If the tape is playing but no sound comes out, the batteries may be weak. Replace all batteries with new ones.
- If your Walkman has not been used for a long time, run the Walkman for a few minutes before inserting a cassette.
- Do not wind the headphones cord around the Walkman. The buttons may be kept pressed, causing unnecessary battery usage.

1 Insert a cassette.

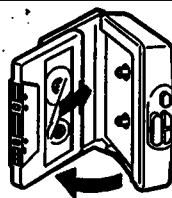


2 Set the FM/AM/TAPE selector to TAPE.



3 Select NORM or CrO2/METAL mode to match the tape type.




4 Press PLAY.



Using MEGA BASS (FX303 only)


Set the MEGA BASS switch to ON to produce deep and powerful sound.

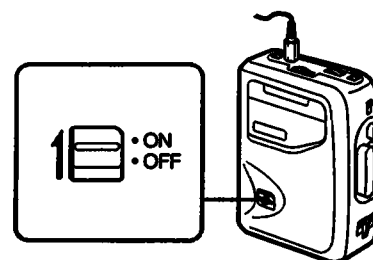

When using MEGA BASS

If the AVLS selector is set to 1 or 2, the MEGA BASS effect is reduced.

Listening to the Radio

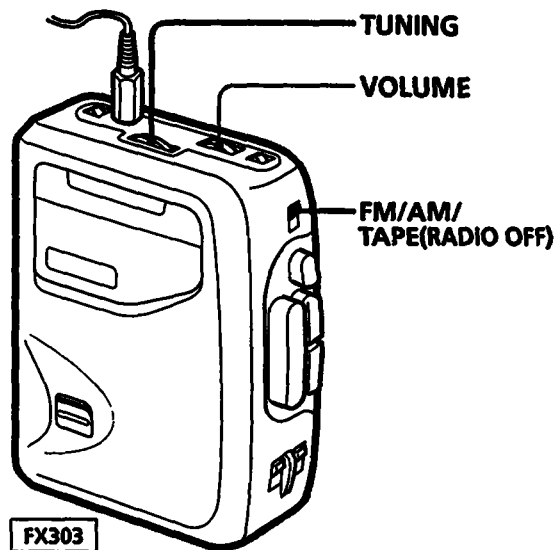

- 1 Set the FM/AM/TAPE selector to AM or FM.



- 2 Tune in the desired station.



To adjust the volume	Set the VOLUME control.
To turn off	Set the FM/AM/TAPE selector to TAPE (RADIO OFF).


Note

If you have inserted a cassette with a metallic shell or label and radio reception interference occurs, remove the cassette.

Improving Radio Reception


Improving FM reception

Extend the headphones cord or adjust the DX/LOCAL selector.

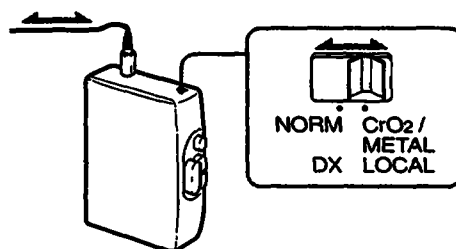

Improving AM reception

Rotate the Walkman.

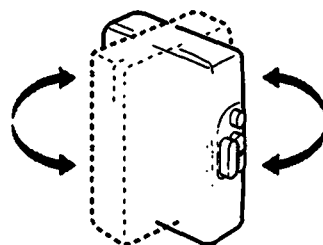

Specifications

Radio Frequency

FM: 87.6 – 108 MHz

AM: 530 – 1,710 kHz

Power Requirements

3 V DC Batteries AA (R6) x 2

External DC 3 V power sources

Battery Life

(approximate hours when using the batteries specified below)

Battery	Playback	Radio
Sony Alkaline AM3 (N)	8 hours	30 hours
Sony SUM-3 (NS)	4 hours	15 hours

Dimensions

FX301: 93.9 x 118.5 x 34.9 mm (w/h/d)

(3 1/4 x 4 3/4 x 1 3/8 in.) incl. projecting parts

FX303: 93.9 x 118.5 x 35.9 mm (w/h/d)

(3 1/4 x 4 3/4 x 1 3/8 in.) incl. projecting parts

Mass

205g (7.3 oz) incl. batteries

Supplied Accessories

- Stereo headphones (1)
- Belt clip (1)

Optional Accessories

- AC power adaptor AC-E30L
- Car battery cord DCC-E130L

Your dealer may not handle some of the above listed accessories. Please ask the dealer for detailed information.

Design and specifications are subject to change without notice.

Precautions

Notes on headphones Concerning Road Safety

Do not use headphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in many areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage


Do not use headphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Taking Care of Your Walkman


- Do not expose the Walkman to extreme temperatures, direct sunlight, moisture, sand, dust or mechanical shock. Never leave the Walkman in a car parked in the sun.
- Prolonged use may contaminate the tape head. If sound drop-out or excessive noise occurs, clean the head and tape path with alcohol.

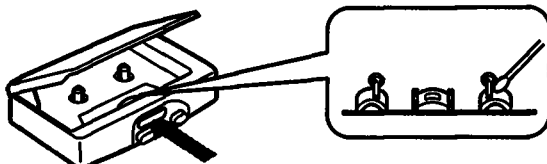

- Clean the headphones plug periodically for optimum sound.
- Do not use alcohol, benzine or thinner to clean the case.

About the battery compartment lid

If the battery compartment lid is detached by an accidental drop, excessive force, etc., attach it as illustrated in the numbered order.

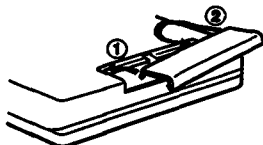


If you have any question or problem concerning your Walkman, please consult your nearest Sony dealer.

Using the Belt Clip

With the supplied belt clip, you can wear your Walkman on a belt for convenient use.

Removing the belt clip

Lift the tab slightly and push down with your finger to remove the belt clip from the Walkman.

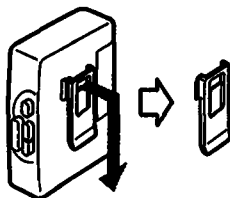

Attaching the belt clip

Align the belt clip with the grooves on the back of the Walkman and slide the belt clip up until you hear a click, to firmly attach it to the Walkman.



SONY.

AUDIO TAPE RECORDER
COMPACT DISC COMPACT PLAYER
ELECTRONIC STILL VIDEO CAMERA
AND PLAYBACK ADAPTOR

LIMITED WARRANTY

SONY ELECTRONICS INC. ("SONY") warrants this product against defects in material or workmanship, as follows:

1. For a period of 90 days from the date of purchase, SONY will pay the labor charges of your SONY authorized service facility to repair the defective product. After this 90-day period, you must pay for all labor charges.
2. In addition, SONY will supply, at no charge, new or rebuilt replacements for defective parts for a period of 1 year from the original date of purchase.

Labor and Parts

To obtain warranty service during the initial 90-day period, you must take the product, or deliver the product prepaid, to a SONY authorized service facility.

Parts Only

During the remainder of the warranty period, any defective part will be replaced if it is taken, or delivered prepaid, to a SONY service center. Labor for removal and installation is available from your SONY authorized service facility or SONY service center, at your expense.

This warranty does not cover cosmetic damage, and damage due to acts of God, accident, misuse, abuse or negligence to the product, including the antenna. This warranty is valid only in the United States of America.

Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the warranty period must be presented to obtain warranty service.

This warranty is valid only if the serial number appears on the product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract with the Sony Partnership within 90 days of the date of sale, the limitation on how long an implied warranty lasts does not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For your convenience, Sony Electronics Inc. has established the Customer Information Center to supply you with product or service information.

Important: If returning product for service, please see reverse side of this card for your nearest Sony Service Center.

SONY CUSTOMER INFORMATION CENTER
201-830-SONY (7689)
714-821-SONY (7689)
708-260-SONY (7689)

or write to:

Sony Customer Information Center
Sony Drive, Mail Drop #T1-11
Park Ridge, NJ 07656

SONY ELECTRONICS INC.
Sony Drive, Park Ridge, New Jersey 07656

Sony Service Centers

Arizona Phoenix 2240 North Scottsdale Road Tempe, AZ 85281 (602) 948-7688	Florida Fort Lauderdale 1200 North Parkway East Suite 410 Atlanta, GA 30339 (404) 953-8871	Illinois Chicago 1730 West Fullerton, Suite 4 Riverport Shopping Center Chicago, IL 60614 (312) 929-8985	Massachusetts Boston 380 University Avenue 128 Westwood Industrial Center Westwood, MA 02090 (617) 329-8130	Michigan Detroit 43304 Steven Mile Road New MI 48050 (313) 344-4044	Minnesota Minneapolis 4300 W. 36th Street St. Louis Park, MN 55416 (612) 930-8000	Missouri St. Louis 12455 Natural Bridge Road Brentwood, MO 63024 (314) 291-2201	New Jersey Morris 288 Route 17 South Morris, NJ 07940 (201) 526-1855	New York Buffalo US Highway 22 At Morris Avenue Union, NJ 07083 (201) 857-9555	Ohio Cleveland 6120 Hill Road Painesville, OH 44130 (216) 945-7688	Pennsylvania Philadelphia 681 Park Avenue King of Prussia, PA 19406 (215) 268-8850	Pennsylvania Pittsburgh 10610 Perry Highway #B 19th Westfield, PA 15090 (412) 938-8486	Texas Dallas 401 Preston Valley Shopping Center Dallas, TX 75230 (214) 881-3537	Texas Houston 7838 Westheimer Houston, TX 77063 (713) 783-8781	Washington Seattle 625 Ridge Seattle, WA 98108 (206) 782-9500
--	--	--	---	--	--	--	---	---	---	---	---	--	---	--

Sony District Service Offices

Western Zone West Coast District Sony Service Company 1200 N. Arroyo Avenue, Suite 410 Costa Mesa, CA 92626 (714) 848-4836	Central Zone Midwest District Sony Service Company 1200 N. Arroyo Avenue, Suite 410 Costa Mesa, CA 92626 (714) 848-4836	Eastern Zone Eastern District Sony Service Company 288 Route 17 South Morris, NJ 07940 (201) 526-1855
Northwestern District Sony Service Company 1289 Old Oakland Road San Jose, CA 95112 (408) 280-7676	Southwestern District Sony Service Company 3201 Premier Dr., Suite 100 Irving, TX 76063 (214) 660-6270	Mid-Atlantic District Sony Service Company 681 Park Avenue King of Prussia, PA 19406 (215) 268-8850
Southeastern District Sony Service Company 120 Interstate North Parkway East Suite 410 Atlanta, GA 30339 (404) 953-8858		